

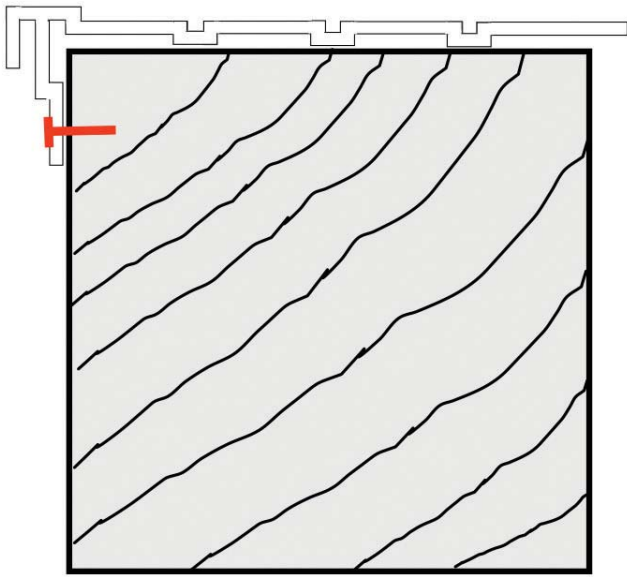


4 PIECE POST WRAP INSTRUCTIONS


Styles S, F and P

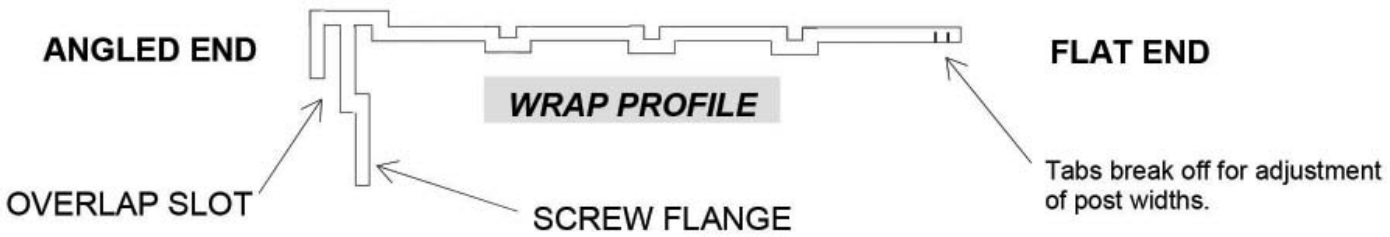


Step 1 – Place first piece of wrap on the post so that the screw flange and inside legs are flush on corner. Attach using screws or staples through groove of screw flange.

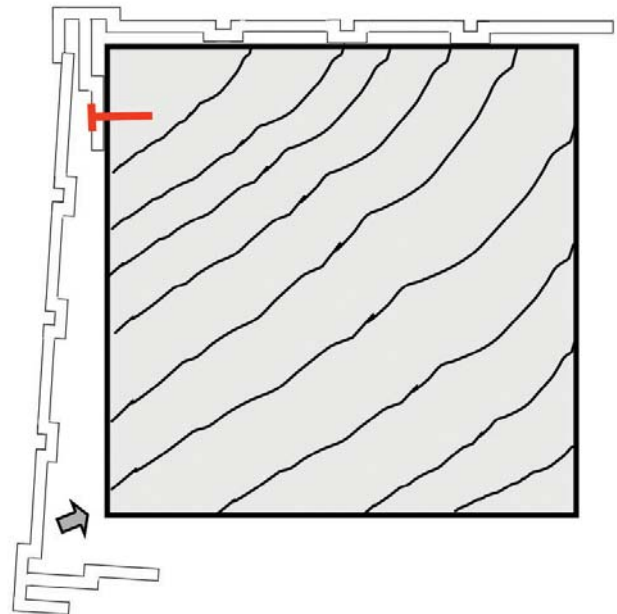

Step 2 – Insert second piece of cladding, inserting flat end into slot of first piece pushing until angled end is seated flush on corner. Attach using screws or staples through groove on screw flange.

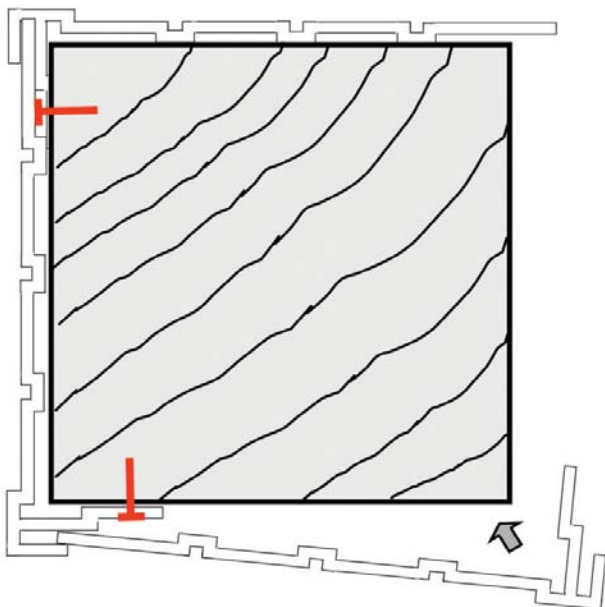

Step 3 – Insert third piece of cladding, inserting flat end into slot of second piece pushing until angled end is seated flush on corner. Attach using screws or staples through groove on screw flange.

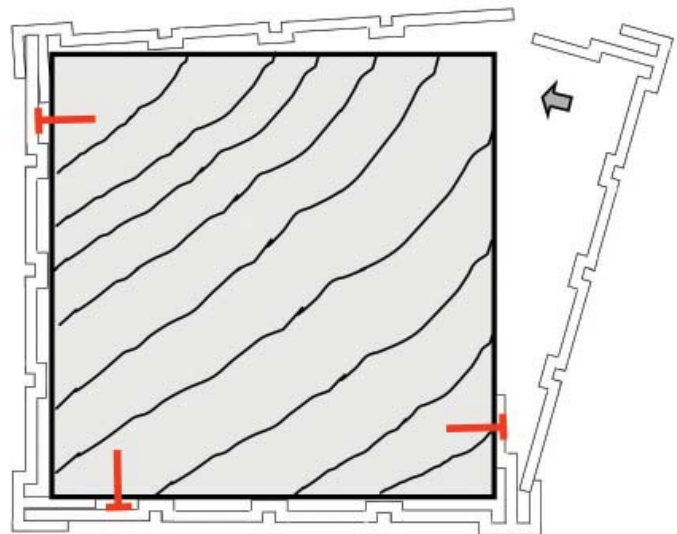

Step 4 – To attach final piece, insert flat end into slot of attached angle and place the slot of unattached end over remaining flat end. A screw or small amount of caulk or vinyl glue may be used.